


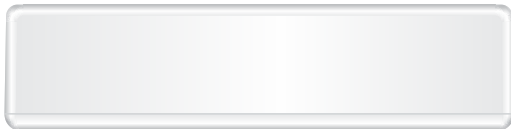

Wireless Contact Sensor



Overview

The Axxess Wireless Contact Sensor transmits information on whether a door or window is open or closed.

Using a magnetic switch the device transmits two different signals: CLOSED, when the magnet makes contact and OPEN, when the magnet breaks contact.

Installation is easy. The quickest method is surface mount with double sided adhesive, while an "invisible" look is achieved by drilling a hole in the top of the door (or door frame) and sliding the switch into the opening. Fully compatible with Control4.

Model Number

CS-C4ZB-11

Approvals

FCC Part 15
CE

Wireless

ZigBee PRO (802.15.4)
Control4 driver downloadable

Color

White or Black

 


Dimensions

W 0.675" x L 2.675"
W 1.71cm x L 6.79cm

Power and Battery

3.6 VDC lithium battery
Low battery notification
Over three year battery life



Uses

Energy management
Security systems
Automatic lights
Home & office automation

Magnetic Switch Function

Magnetic switch normally open (NO)
Closed when in magnet range
External contact connection

Temperature Sensor

Accurate to +/- 1°C
Operating range of -40°C to 70°C

Mounting Options:

1. Drill & Hide - Drill a 7/8" hole into door or frame and slide switch inside
2. Double sided adhesive
(Magnet mounts opposite with adhesive)

Magnet Options for Contact Sensor:

